


VERTICALS INSTALLATION INSTRUCTIONS

OUTSIDE MOUNT


1

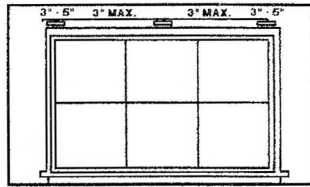

MOUNTING BRACKETS for headrail 3" to 5" from where each end of headrail will be. Brackets should be placed 1 per every 40 inches when installing. All hardware brackets will be attached to headrail excluding large orders. Which will be in a separate parts box.

2

For Inside Mount
See Back

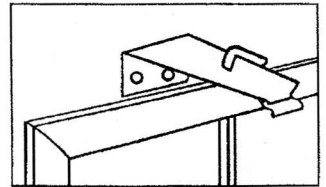


Proper height for top of bracket is at point where original ordering measurements were made. If in doubt, add 1/2" to blind length to allow clearance above floor or 1/4" for clearance above sill, as appropriate. Otherwise blind length should extend 3" below sill.

Mount brackets at intervals determined in step 1.


3

For Inside Mount
See Back

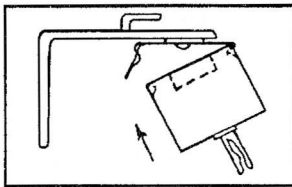

INSTALL TRACK: Rotate track into clip until it snaps in place.


4

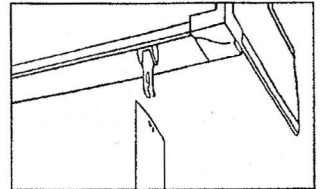

INSTALL VANES: Pull cords so vane carriers extend across entire width of track. Rotate carriers with tilt control so they are 90 angle to window.

Attach vanes by pushing up until hole snaps in place. Be certain all vanes are facing the same direction. If vane needs to be removed, see instructions below. See reverse side for more info.

5

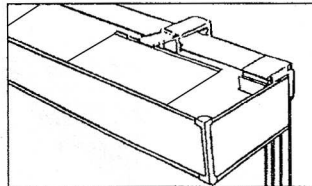

INSTALL VALANCE: Slide top of valance into prong on top of mounting bracket.


INSTALL RETURNS: Valance includes 6" valance returns which slide into corner pieces attached to valance. Returns can be trimmed with tin snips. Material within returns should be removed first and trimmed with scissors, if required.

HOW TO OPERATE: Always use both hands when pulling chain or cord, one on each strand.

To draw vanes, pull cord. Vanes must be rotated to fully open position before drawing.

To rotate vanes, pull beaded chain. Vanes must be drawn to fully extended spacing before rotating.

6

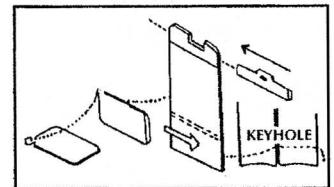

INSTALL BOTTOM WEIGHTS AND/OR CHAINS: For freehanging fabric vanes, insert the bottom weights into hem pocket of each vane. Small clips on the sway chain snap onto sides of bottom weights.

FOR RIGID VANES: If chain was ordered, insert chain through hole punched near bottom of vanes. Use spacer to measure chain between vanes. Push chain into small slots below holes.

To realign vanes, simply rotate vanes to closed position and gently continue to pull chain down about 2" until "click" is heard. Repeat as necessary.

HOW TO REMOVE VANE: To remove vane, slip credit card up inside carrier along side vane on side of carrier with hook. Gently pull vane down along side of carrier without hook.


CUSTOMER SERVICE HOTLINE
1-765-884-3265

**SEE REVERSE SIDE FOR INSIDE MOUNT
INSTALLATION INSTRUCTIONS**

INSIDE MOUNT


Add these steps in place of #2 & #3 above for inside mount

2

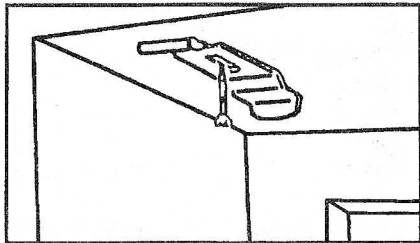

FOR INSIDE OR CEILING MOUNT WITHOUT VALANCE: Drill holes for installation clips into top of casing or into ceiling a minimum of 2 1/8" from window frame at intervals determined in step 1.

3

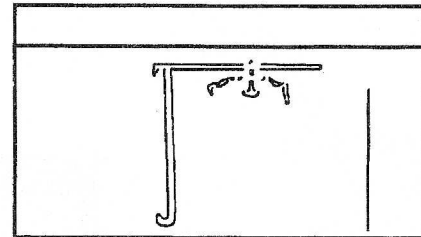


FOR INSIDE CEILING MOUNT WITH VALANCE: Drill holes for installation clips in valance at intervals determined in step 1 in middle groove underneath top of valance. (For 2 blinds drill holes 3/8" in front of closest groove to balance front).

Use valance template, pencil in marks through holes at least 2 1/8" from window frame screw in clips and valance.

HELPFUL TIPS


INSTALLING LOUVRES

1. Pull control cord so that carriers are evenly spaced along track.
2. Pull control chain until carriers are in "open louvre" position.

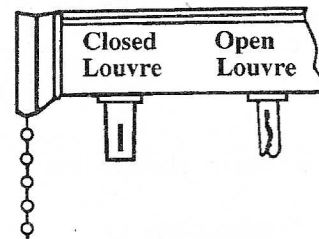

FOR VINYL LOUVRES

3. Push slotted louvre up into clip of carrier until slot of louvre catches on hook of clip.
4. Pull slightly on louvre to assure proper interlock.

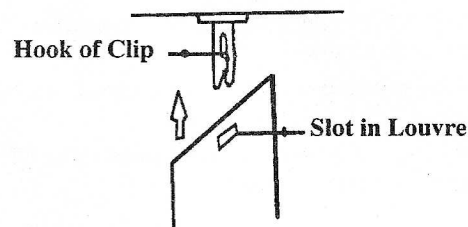

NOTE: PLEASE MAKE SURE ALL CARRIERS ARE IN THE OPEN POSITION WHEN TRAVERSING LOUVRES.

REMOVING LOUVRES

To remove louvre blades, rotate louvre to open position; slide a credit card between louvre and clip. This will open clip sufficiently to remove blade.

