



# Sheer Radiance

## Valance Installation Instructions

### Outside Mount Valance Installation


**BEFORE YOU START:** The headrail and vanes must be installed.

1. Draw all vanes open as far as possible.
2. Set the valance on top of the headrail installation brackets.

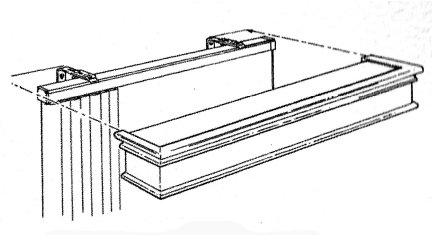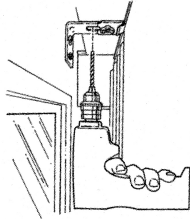

3. From below, drill holes through the slots at the rear of each bracket through the valance dust cover.


4. Insert a 1 3/4" #6 self tapping screw through the slot of the mounting bracket into the hole drilled through the valance dust cover and tighten.

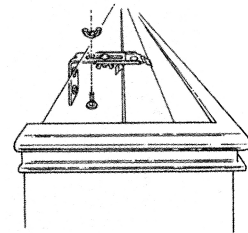

5. Unpack and hang Sheer Radiance!



### Inside Mount Valance Installation

**BEFORE YOU START:** For a flush mount, a minimum window depth of 6" is required.

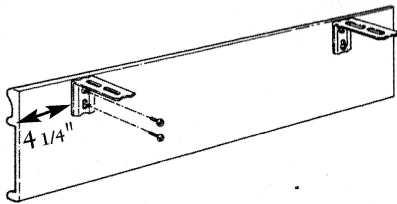

1. Attach the short leg of the "L" bracket to the backside of the valance 4 1/4" in from each end. The top of the bracket must be even with the top of the valance. Use 1 3/4" #6 self tapping screws.

2. Slide the long leg of the "L" bracket until the front of the valance is flush with wall.

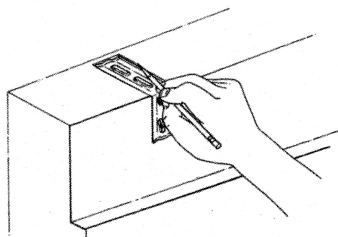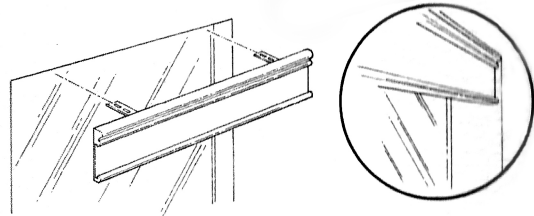

(View from behind valance)

3. Mark the window casing with a pencil indicating the position of the screw holes. Set the valance aside.