

KENSINGTON VERTICAL BLINDS

MEASURING GUIDELINES

Absolute accuracy is essential when measuring for any Kensington window treatment. Always use a metal tape ruler. As a dealer, you are responsible for correct measuring. Your fabricator is not accountable for incorrect measurements.

Measuring for Inside Mounts (Fig. E)

- Measure the width (A) inside the window opening at the top, middle and bottom.
- Measure the height (B) inside the window opening at the left, right and center.
- Order the narrowest width measurement and the shortest height measurement.
- Measure window on the diagonal (C). If the two diagonal dimensions are not exactly the same, it may be more appropriate to specify an outside mount shade for optimal light control and privacy.

For inside mounts, allowance for window clearance will be made automatically at the factory.

Measuring for Outside Mounts (Fig. E)

- First, measure exact width and height of area to be covered. For best appearance, we recommend adding 6" to opening width measurement (A) and 2" to opening height measurement (B) where possible.

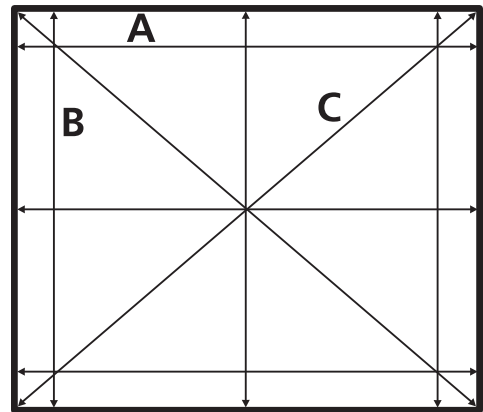


FIGURE E